

Diagnostic Isolation Mode Procedures

- Diagnostic isolation mode is only to be used by properly trained maintenance personnel.
- Verify there is no personal on the equipment, and there is no unauthorized personal in the shadow of the equipment or in line of fire.
- Apply Isolation Officer's lock and diagnostic tag to a hasp on the lockout switch in the "run" position.
- Place Barricading across access ladder to prevent any unauthorized personal from gaining access to equipment controls.
- Operators are not allowed to be on the equipment when locked out in Diagnostics mode.
- Haul Truck operators are not to be involved in the LOTO for diagnostic testing at the fuel islands or maintenance shops.

